

Ace



PRO TURBO 2000W HAIRDRYER



complies with
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS


1000W

1YEAR
WARRANTY

Model: HRD2ACWA, HRD2ACBA,
HRD2ACGA, HRD2ACOA,
HRD2ACRA

Warning:

- The appliance is NOT to be used by children and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by the person responsible for their safety.
- Always ensure that children do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not use the appliance in a bathroom since the proximity of water presents a hazard even when the hair dryer is switched off.

Cautions

1. The electric power supply should come from a properly wired outlet. Also, check the capacity of the outlet and use the dryer separately from other equipment.
2. Always ensure the voltage to be used corresponds to the voltage stated on the unit.
3. Never leave the appliance unattended while operating.
4. After use, unplug from the outlet, when unplugging, always grasp the plug, not the cable
5. If the dryer blows air irregularly, discontinue use immediately.
6. Avoid dropping the dryer or subjecting it to other excessive shock.
7. Do not use the dryer near gas or other inflammable materials ,such as benzene, paint thinner, sprays, etc.
8. Do not use thinner, benzene or other solvents when cleaning the dryer.
9. Be careful that hair is not sucked into the air inlet during use, never insert foreign objects into the air inlet or outlet, mechanical damage or shock can result. If the air inlet or outlet is blocked during use, the thermal switch may function and the heater section will be turned off. If this happens, switch off the appliance immediately and remove the blockage. Allow it rest for a few seconds and switch on again.
10. During use, be careful of the nozzle, which will become hot.
11. Do not direct the hot air flow towards the eyes or other sensitive areas.
12. Close supervision is necessary when any appliance is used by or near children and invalids.
13. Do not use the hair dryer for purposes other than drying and styling human hair.
14. This appliance is designed only for household use.
15. Do not use any attachment with this dryer other than those supplied.
16. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair.
17. If the appliance over heats, it will switch off automatically. This is the over-heat protection system. Allow it to cool down, then switch it back on.

How to use:

1. Make sure that the power switch are on "0" position

at first, then insert the plug into outlet and turn the power switch on.

2. Black Switch is for speed selection. Choose "0" Off, "I" Low & "II" High Speed
3. Red Switch is for Heat selection. Choose "0" for no heat, "I" Low & "II" high heat.
4. Use the red button to release cool air during styling. This is the cool shot button.

Action to reduce the risk

- The hair dryer should be carefully kept in order to reduce the risk of a hazard.
- Always unplug the appliance from the power socket after use.
- Do not use it while bathing or in the bathroom
- Do not place or store it in the place where it is easy to fall down or pull into a tub or sink
- Do not place it in or drop it into water or other liquid
- If water falls into the hair dryer, switch off at the power socket and unplug the hair dryer immediately
- Do not use accessories which is not supplied by manufacturer
- Never use the appliance when the cord or plug is damaged
- Do not use the hair dryer outdoors
- Do not put the hair dryer on a hot surfaces

Cleaning

- The appliance can be cleaned with a dry cloth.
- The attachments can be cleaned with a moist cloth or rinsed under a running tap.
- Remove the attachments from the appliance before cleaning them. Make sure the attachments are dry before using or storing them.

Storage

- Allow the appliance to cool and store it in a dry location. Never wrap the cord around the appliance since this will cause the cord to wear prematurely . If the supply cord of this appliance becomes damaged the appliance must be replaced by returning to the retailer from which the product was purchased or a similarly qualified person in order to avoid a hazard.



Ace

Ace guarantees that this product has been thoroughly inspected and tested before being dispatched and is free from mechanical and electrical defects and complies with the applicable safety standards. However, should defects due to faulty material or workmanship develop, under normal domestic use, within 6 months from the date of purchase please return the product to the store from where it was purchased for a full refund or replacement.

Extended 12 Month Limited Warranty

Ace offer an extended 12 month limited warranty from the date of purchase to offer the consumer peace of mind on their purchase. Should defects due to faulty material or workmanship develop, under normal domestic use, within 12 months from the date of purchase, please return the product to the store from where it was purchased for replacement.

The following conditions apply:

- 1) Please ensure you retain your receipt as this must be presented when making a claim under the terms of the warranty. It is impossible to determine the warranty period without proof of purchase, so please keep this in a safe place.
- 2) If a refund or exchange is required the product must be complete with all accessories, parts and packaging. Missing parts will render the warranty void.
- 3) Upon receipt of your appliance check it for any transport damage to ensure it is safe for use. Return it to the store as soon as possible for exchange if damaged. The warranty is void if products are damaged after use, so please do not use the damaged product.
- 4) Your product is designed for normal domestic household use. Failure to read and comply with the instructions for use, cleaning and maintenance will render your warranty void, so please read these instructions carefully to ensure your safety, and get the most effective use from the product. (e.g. lime scale; water deposits; and/or insect infestation)
- 5) Any abuse, negligent, improper or accidental use or care will render the warranty void and Creative Housewares (Pty) Ltd will not be liable for any loss or damage.
- 6) Any attempted repair, or replacement of unauthorised parts will render the warranty void, so please contact an authorised service centre or agent for any service or repair requirements.

Before returning your product, check for the following:

- 1) Your household mains supply socket is working and switched on.
- 2) The mains supply circuit is not overloaded (White trip switch on your DB board is off).
- 3) You have read the trouble shooting guide in your Instructions for Use.
- 4) All accessories and parts are present.

If service or repair becomes necessary outside the warranty period, this service is still available however all transport/postage, spares and labour costs will be paid by the consumer. All chargeable repairs will require the consumers' approval in writing once the quote is accepted. Once the go-ahead has been received Ace will undertake to conduct the repair within a reasonable time and maintain the condition of the product as received.

All repairs carry a 3 month warranty. Ace will attempt to conduct repairs within reasonable industry standards but cannot be held responsible or liable for any circumstances not under their direct control.

National Service Centre: 086 111 5006

e-mail: help@creativehousewares.co.za

creative housewares

web: www.creativehousewares.co.za

Cape Town

20 Tekstiel Street, Parow, Cape Town, 7493, South Africa • P.O. Box 6156 Parow East, 7501, South Africa
Tel: +27 21 931 8117
Fax: +27 21 931 4058

Durban

35 Adrain Road, Windermere, Durban, South Africa, 4001
Tel: +27 31 303 3465
Fax: +27 31 303 8259

Johannesburg

Unit 25 & 26 San Croy Officepark, Die Agora Road, Croydon, 1619
Tel: +27 11 392 5652
Fax: +27 11 392 1694

1 year warranty





Ace

creative housewares

🏠 20 Tekstiel Street, Parow, Cape Town, 7493, South Africa

✉ P.O. Box 6156 Parow East, 7501, South Africa

☎ +27 21 931 8117 📠 +27 21 931 4058

Service Centre Helpline: 086 111 5006

🌐 www.creativehousewares.co.za

